

General Advice

The appearance, performance and durability of the installed floorcovering will be determined to a large extent by the quality of the prepared subfloor and the conditions in which they are laid.

The installation of Flotex Sheet should be carried out in accordance with the national code of practice for the installation of resilient floor coverings if applicable. Areas to receive flooring should be clean, free from other trades, fully enclosed and weather tight. Subfloors should be clean and free of contaminants, smooth, sound and permanently dry.

Always conduct moisture tests on **all** substrates. All ground based level floors should have an effective moisture barrier.

Areas to receive flooring shall be adequately lit to allow for proper inspection of the substrate, installation and for final inspection.

It is essential that the laying area is at a steady temperature of 18°C for 24 hours prior to, during, and for 24 hours after installation. The material and adhesive should be conditioned in the same environment for at least 24 hours prior to the installation. Where national codes of practice exist they take precedence over these guidelines.

Rolls should be stored standing up, storing the rolls laying down will result in pile crush.

Prior to installation rolls should be checked to ensure that the correct colour, batch number and quantity have been received and that the material is in good condition. No claim will be accepted for incorrect colour, pattern or obvious damage if the material has been fitted.

Use material from the same batch/dye lot and install in roll number sequence. The use of different production batches will always result in visible shade differences. The batch number is clearly marked on the material packaging and must be checked before commencement of installation.

Always pay particular attention to the direction and planning of the sheets to avoid cross seams that coincide with areas of heavy use or doorways.

Install sheets in the same direction for seaming. Install with arrows all pointing in the same direction, the arrows on the back of the sheet indicate the pile direction.

Install one length of sheet at a time, making sure to place the material into wet adhesive and roll afterwards with a 68 kg roller or pressed with a rubbing board or glider within the open time of the adhesive (or after the appropriate waiting time specified by the adhesive manufacture if applicable), rolling in all directions to ensure a firm bond. It is important to only spread sufficient adhesive that can be covered and rolled/pressed within the open time of the adhesive.

Note: The adhesive must be spread evenly over the entire floor area with particular attention to edges – this will ensure that the sheet is fully bonded at the perimeters.

Always clean away excess adhesive with a damp cloth before it is allowed to dry.

As with all newly installed floor coverings Flotex sheet should be protected from heavy traffic, particularly high point load wheeled traffic, for 24 hours and must not be washed for 48 hours after installation.

Flotex can be used in conjunction with under-floor heating systems. A separate guidance note "[Installation of Floor Coverings on Underfloor Heating Systems](#)" provides more information on the conditions for installation in such circumstances.

Adhesive Recommendations and application

When installing Flotex Sheet either Forbo Eurocol 540 Eurosafe Special or Forbo Eurocol 614 Eurostar Lino Plus low emission EC1 adhesive is recommended. If alternative products are to be used consult with the supplier for more information, guidance and warranty.

Use a 1.5 x 5mm V notched trowel to apply the adhesive.


Note: Trowels will wear during use, check the trowel both before and during use to ensure that the proper, specified trowel notch is used and maintained.

The open time of the adhesive will depend on site conditions and porosity of the base. It is best practice to conduct an adhesive bond test before starting the installation. Bond testing will assist in identifying both the working characteristics of the adhesive (waiting and working time) for the site conditions, and also any potential bonding problems.

If alternative adhesives are to be used consult with the supplier for usage information, guidance and warranty.

Note: Pile Direction - to prevent potential problems of deviation of wheeled traffic travelling across the dense pile of Flotex; it is strongly recommended that Flotex sheet is laid with the pile running lengthways in the main direction of traffic.

The arrows on the back of the sheet indicate the pile direction. Lay the sheets edge to edge, following the direction of the arrows, which should point towards the main light source, **NEVER AWAY**.

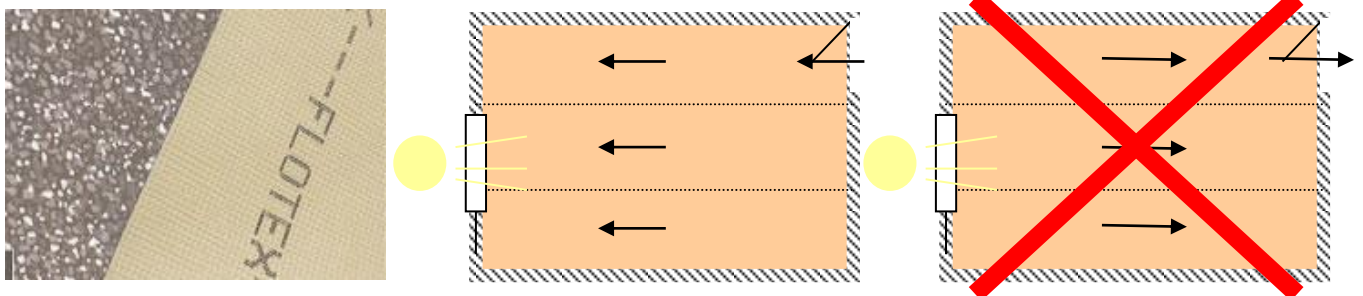

Installation

Measure the area to be installed and determine the direction in which the material will be installed and seam placement. Seams must be a minimum of 15 cm away from any subfloor joints such as day joints, saw cuts, etc. Cut the rolls to the required lengths, remembering to allow for the pattern repeat. Allow at least 5cm trim at ends.

Installation Guidance Note: Flotex Sheet

Dry lay the pieces, butting the factory edges for seaming. Make sure that the seam edges come together with a net fit with no fullness or gaps and check the pattern match.

Trim off surplus. Roll the sheets back onto themselves to approximately half their length. Take care that the sheets do not shift during handling. Mark the position of the outside edge of the first sheet in pencil on the floor. Apply the adhesive to the line marking the edge of the first sheet. Feed the first sheet into the wet adhesive (after the appropriate waiting time specified by the adhesive manufacture if applicable) following the pencil mark on the floor.



Roll the sheet with a 68 kg roller or press into the adhesive with a rubbing board or glider within the open time of the adhesive.

Using a 68 kg roller or rubbing board or glider, press the Flotex firmly into the adhesive from the center, towards the edges, to eliminate air bubbles and ensure good adhesion to the sub-floor. Areas that cannot be rolled with the large roller e.g. abutments such as door frames or skirting boards should be rolled with a hand roller or pressed into the adhesive with a rubbing board.

Trim off excess floor covering along the walls and skirting boards. If necessary roll or press the flooring into the adhesive after trimming.



Remove fresh adhesive residue immediately with a clean white damp cloth.

Follow the above procedure to lay the opposite half of the first sheet and continue to lay the remaining sheets in the same way, edge to edge with close joints. Finish off with a rubbing board or glider over the entire floor.

Laying Flotex to a Staircase

Flotex sheet is suitable for use on stairs, following these guidelines:

- Nosing should always be used.
- A separate piece of Flotex must be used for each tread and riser.
- Use contact adhesive only for the risers.
- On the tread the pile should lay (arrows) towards the nose of the step.
- For the riser the pile should lay (arrows) downwards towards the tread.

Artline Borders

Edging a room with Artline Borders

This method may be followed when Flotex Artline is being used to border the edge of a room.

Before laying the Flotex sheet mark a line around the perimeter for the room where the border material will be fitted. Allow for a 1cm – 2cm trim of the width of the Artline border in case the walls are not perfectly straight.

Lay the Flotex sheet using the method described above allowing a 1 to 2cm overlap of the line marking the perimeter of the field. Spreading the adhesive to the same overlap of the line marking the perimeter of the field material.

Roll with a 60 - 75 kg roller or rubbed with a rubbing board or glider within the open time of the adhesive.

Trim the perimeter of the field material with a straight edge and utility knife parallel to the wall to the previously marked line, remove the trimmed edge.

Spread the adhesive to the border of the room and lay the border into the adhesive and roll with a 60 - 75 kg roller or rubbed with a rubbing board or glider within the open time of the adhesive.

Trim off excess floor covering along the walls and skirting boards. Roll or press the flooring into the adhesive after trimming paying particular attention to the seams where the field material and border meet.

Inlaying Borders

Lay and adhere all the sheets in the room as above.

Measure out the locations for the Artline strips and mark with white chalk.

Place the cutting guide in position and cut out the required flooring, cutting from both sides. Remove the cut piece of floor covering (see below).



Installation Guidance Note: Flotex Sheet

Apply a fresh layer of acrylic adhesive. Lay the Artline border into the adhesive and using a rubbing board press the border firmly into the adhesive (see below).



On completion of the installation

First impressions may have more impact on the client than hours of skilled fitting.

The completed installation should be cleared of scrap material and debris, the floor vacuumed and any traces of adhesive residues removed from the floor and skirtings.

Note: *Upright vacuum cleaners with a mechanically powered brush should be used on Flotex sheet.*

If the floor covering is to be protected from other trades or site traffic prior to project completion, a protection product should be chosen that is appropriate for the type and level of traffic likely to be experienced.

If the optimum performance of any new floor covering is to be achieved, it is important that the correct cleaning and maintenance procedures are used from day one. Cleaning and maintenance guides for all Forbo Flooring Flotex ranges are available for download at: www.forbo-flooring.co.uk/flotexdownloads

Cleaning and maintenance guides should be passed onto the main contractor, client or end user as appropriate on completion of the installation, and before any hand over clean is started.

If in any doubt contact us:

Forbo Flooring UK Ltd: Tel: 0800 0282 162; Fax: 01772 646912; Samples: 0800 731 2369
Info.flooring.uk@forbo.com ;
www.forbo-flooring.co.uk

Additional Reference Documents and information :

BS8203 :2017

The CFA Guide to Contract Flooring (Tel : 01159 411126)