

## Coral

### Ieklāšanas instrukcija

Pareiza materiāla ieklāšana ir svarīgs priekšnosacījums grīdas seguma turpmākajai kalpošanai.

#### Pamatgrīdas sagatavošana

Pamatgrīdai ir jābūt: gludai, līdzenai un pastāvīgi sausai.


Ja nepieciešams tā iepriekš jāizlīdzina.

#### Līme

| Materialiāls                        | Absorbējoša pamatgrīda -<br>imīd* g. nīfīl g.<br>Acrylic vinyl adhesive                                                   | DNeabsorbējoša -<br>Pressure sensitive<br>Pressure sensitive                   |
|-------------------------------------|---------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------|
| Coral                               | e.g. 640 Eurostar special,<br>(use A2 trowel; B1 trowel<br>for Coral FR)<br>Polyurethane adhesive, e.g. 140<br>Euromix PU | adhesive,<br>e.g. 650 Eurostar fastcol<br>(use texture roller, as<br>included) |
| Coral Duo FR,<br>Coral Grip outdoor |                                                                                                                           |                                                                                |

Other compatible brands or other types of adhesive may be considered as well, e.g. polyurethane, epoxy or spray types. Consult the adhesive supplier for detailed information about applicability and proper techniques.

#### Layout and cutting

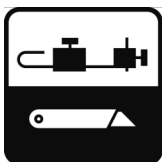

Lay out the acclimatized material (at least 15 °C) on a smooth horizontal surface and allow it to relax at recommended temperature and time before precutting it. Cut off the edges + 1 cm extra, before a butt jointed installation.

#### Application of adhesive



Carefully follow the instructions provided by the supplier of the adhesive.

*Acrylic adhesives* usually are evenly applied to the substrate only. A waiting time should be considered before the flooring is placed and pressed into the adhesive. Usually this is achieved when the adhesive shows "tackiness"; at normal conditions (room temperature, average moisture), typically ca. 10 min. After laying the material in the adhesive bed use a (hand) roller to improve firm adhesion.

*Pressure sensitive adhesive* (contact adhesive) is applied to both the substrate and the flooring material, usually with a texture roller to obtain a maximum adhesive surface area. Be aware that pressure sensitive adhesives require an extended drying time before the materials can be attached, especially the water based types! Check the producer's instructions to find out detailed information.