

# Installation Guide: Sheet flooring site form coved with 20mm Cove Former & Capping Strip

# **Product Detailing**


Shown example of a sheet flooring pulled up the wall with a cove former and a capping strip. Wall and floor should be clean, dust free and floor surface regularity to be SR1 according to BS8203:2017 (Section 6.2.3) with wall flat and a consistent 90-degree angle to floor to achieve the best installation results. Flooring and PVC profiles are fitted against the wall, floor and each other with a contact adhesive in accordance with the recommendations of the adhesive manufacturer. Such coving should be constant in radius and care should be taken to ensure that they are straight and regular to minimize the formation of voids beneath the floor covering (BS8203:2017 Section 6.12).

## **Quantum Flooring Accessories**

Capping Strip UCS2
Cove Former ECF2

### **Forbo Sheet**

Sphera 2mm Eternal 2mm Surestep/Safestep 2mm Modul'up 2mm and 3.45mm Sarlon 2.6mm and 3.4mm

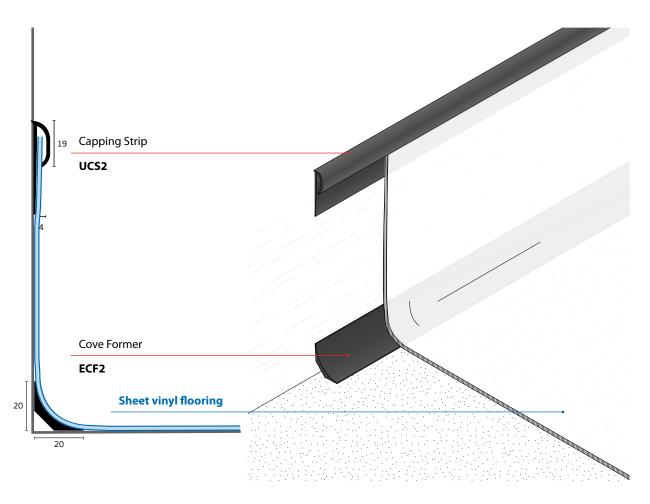



STAIR NOSINGS

ACCESSORIES

TRANSITIONS & ENTRANCE MATTING





## **Specification statement**

80A COVE FORMER/ CAPPING STRIP:

Manufacturer:

Quantum Flooring Solutions,

a trading name of Quantum Profile Systems Ltd. Web: www.quantumprofilesystems.com

Tel: +44 (0)161 627 4222

Product reference:

Cove Former and Capping Strip for Resilient Floor covering.

Cove former: ECF2 - 20 x 20 mm, PVC.

Capping strip: UCS2 - 4 x 38 mm, PVC.

For use with vinyl flooring. See 'Options' below and insert colour.

Capping strip: Light reflectance value (LRV)/ Colour:

6 Black, 7 Dark Brown, 15 Charcoal, 29 Cloud Grey, 31 Caramel,

81 White.

Product Code	Colour Options			Length
ECF2	Black			2 m
UCS2	Black	Dark Brown	Regency 🌑	
	Graphite	Charcoal	Boulder 🛑	2 m
	Cloud Grey	Caramel 🛑	Platinum Grey	
	lvory 🛑	White $\bigcirc$		