

## **General Advice**

All Nuway Connect products are loose laid.

Nuway Connect products in open format are roll able for ease of cleaning.

Always follow these simple guidelines:-

- Always clean the mat well base floor prior to installation.
- Mat well floors must be of a sound construction, dry, smooth and level.
- Do not try to force a mat section into place.
- Always follow the layout drawing and installation literature.

## **Multi section mats**

Install 'T'-Bars in the inverted format. Use a screwdriver to lift the mat edge to assist installation.

Install each mat section as per layout drawing supplied. Each mat section has a lettered label attached and must be placed in the mat well to correspond with the layout drawing.

Mats should be carefully rolled out into place.

If required mat sections can be made square, a simple tap with a rubber / nylon hammer should suffice.

On larger areas roll able mats can be joined together using the supplied connecting strip and locking clip to create one full length roll able mat.

## Joining multi mat sections together



Lay the mat sections on the floor in accordance with the lettered layout drawing.

Leave a 5mm gap between each mat section.


Insert the plastic connecting strip fully into the grooves of each carrier.

Forbo Flooring UK Ltd. Tel: 0800 0282 162;

Fax: 01772 646912

Email: info.flooring.uk@forbo.com.

1

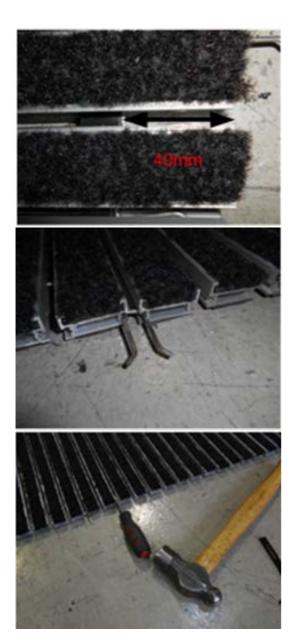

The connecting strip should be cut approx. 40mm shorter than the end of the mat section, this will allow for the locking clip to be inserted.

Carefully insert the locking clip into the rounded grooves in the centre of the carrier.

Use a flat headed screwdriver and hammer to insert the locking clip fully into the carrier each side of the mat.

Ensure the end of the locking clip is fully inserted up to the plastic connector strip approx. 40mm from the mat edge.

## **Removing mat sections**

Lift a corner of the mat section using a screwdriver and ease the mat edge up, the mat can now be simply rolled up to clean and maintain the base floor.

Remember the sequence of removal for correct replacement. When replacing mat sections, always ensure the same mat section are placed in the same location that it was removed from.

Forbo Flooring recommends that Nuway Entrance systems are installed by a member of the FESSI (Forbo Entrance Systems Specialist Installer) network, details of which can found at the following link: www.forbo-flooring.co.uk/FESSI