

Installation Guidance Note: HemingwayDesign X Forbo – Digitally printed vinyl

General Advice

Subfloor preparation for, and installation of Digitally Printed vinyl should be carried out in accordance with BS8203 code of practice for the installation of resilient floor coverings. As with all resilient floor coverings, bases should be clean, smooth, sound and permanently dry.

Adhesives

For standard installations Eurocol 540 Eurosafe Special adhesive is recommended, however, if a low emission EC1 adhesive is required, Eurocol '640 Eurostar Special' may be used.

Only spread sufficient adhesive that can be covered within the specified open time.


Digitally Printed vinyl should be rolled with a 68 kg roller immediately after laying into, and within the open time, of the adhesive – the open time of the adhesive will depend on site conditions and porosity of the base.

Always clean away excess adhesive with a damp cloth before it is allowed to dry.

Direction of laying

The following installation advice should be followed in relation to direction of sheet laying.

Sheet lengths should be installed in the same direction.

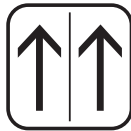

Coved Skirtings

Digitally Printed vinyl can be used in conjunction with standard PVC set in coved skirtings.

If site formed coving is being used for Digitally Printed vinyl, the optimum visual effect will be achieved by laying with a border cove with a contrasting uni colour /all over design.

Seam Welding

All seams should be cold welded with Noviweld 671 cold weld.

Perimeter Sealing

In areas subject to wet spillages or cleaning methods the following advice should be followed:

Where the floor covering is flat laid without coved skirtings the perimeter edges should be sealed with a suitable water and mould resistant flexible sealant. This should also be applied at abutments such as architraves together with any areas where pipes, etc. come up through the floorcovering.

Underfloor heating

As with all Forbo floor coverings, Digitally Printed vinyl can be used in conjunction with under-floor heating systems. A separate guidance note "Installation of Forbo PVC and Linoleum Floor Coverings on Underfloor Heating Systems" provides more information on the conditions for installation in such circumstances.

Points to note

Newly laid floors should be protected from heavy traffic for 24 hours and from point loading and wheeled traffic for five days.

Contact us: Web: www.forbo-flooring.co.uk Email: info.flooring.uk@forbo.com
Telephone: 0800 0282 162 Fax: 01772 646912

Additional Reference documents and information:

Forbo Floor Coverings Installation Guide: www.forbo-flooring.co.uk
BS8203:2001+A1:2009
The CFA Guide to Contract Flooring (Tel: 01159 411126)