

Installation Guide: Hygienic cladding panels – welded

Product detailing

The hygienic cladding panels should be adhered to a smooth solid substrate, which is free from dust and particles and conforms to an agreed surface regularity, a two-part polyurethane adhesive should be spread with a 5 mm square notched trowel to the substrate wall, care should be taken to ensure the base of the panels is in line with the flooring material so as to aid a neat welded joint between the two, upon application immediately apply sheet to the wall, attention should be given to making sure the panel is plumb and straight following any datum line set in place, the panel will require supporting with double sided tape while the adhesives cures.

Quantum Flooring accessories

QCF35 35 mm flexible PVC
cove former


*Alternatively, cove former ECF2
(20mm radius) can be used for
vinyl sheet only*

Jemiclad cladding

Jemiclad Pro 2.5mm
Jemiclad Ablaze 2.5mm
Jemiclad Protect 2.5mm

Forbo sheet flooring

Sphera 2mm
Eternal 2mm
Surestep/Safestep 2mm
Modul'up 2mm and 3.45mm
Sarlon 2.6mm and 3.4mm
Marmoleum 2mm, 2.5mm and 3.2mm

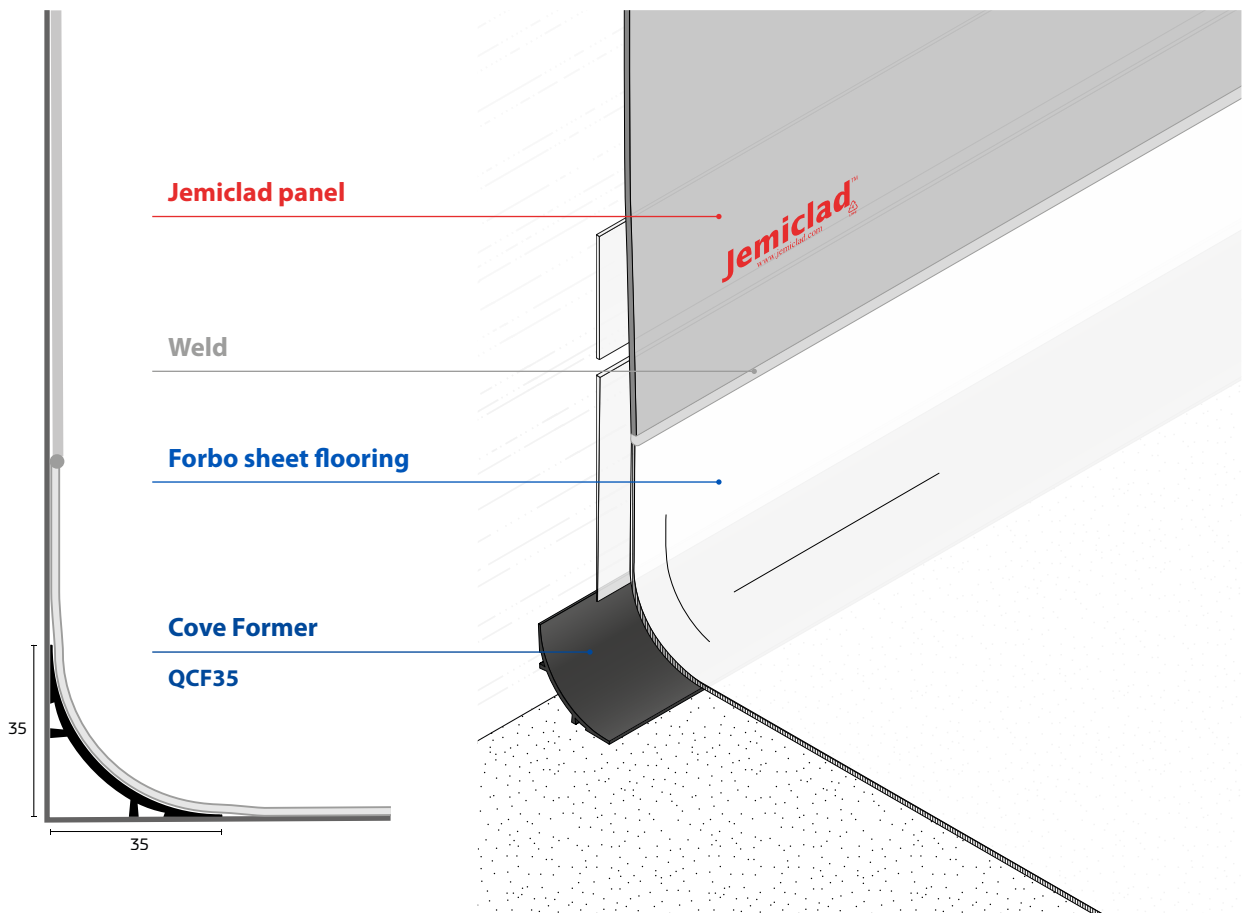

Jemiclad

Leaders in Interior Finishes

Web: www.jemiclad.co.uk

Tel: +44 1903 722522

e-mail: technical@jemiclad.co.uk



FLOORING SYSTEMS

Specification statement

80A COVE FORMER:

Manufacturer:

Quantum Flooring Solutions,
a trading name of Quantum Profile Systems Ltd.

Web: www.quantumprofilesystems.com

Tel: +44 (0)161 627 4222

Product reference:

Cove Former for Resilient Floor covering.

Type:

Cove former: QCF35 - 35 x 35 mm, PVC.

For use with sheet flooring. See 'Options' below and insert colour.

| Product Code | Colour Options | Length |
|--------------|----------------|--------|
| QCF35 | Black ● | 2m |