

colorex SD/EC

Inner corner installation instructions



Install the floor leaving 5 cm distance from the wall




Apply contact glue to the corner as well as to the wall [10 cm height]



We suggest to cover one side to avoid that the glue interferes with the correct application of the corner



After having well heated the piece with a hot air gun, position the side respecting the height sign [10 cm].

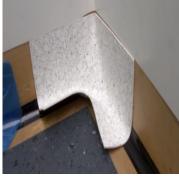

Try to keep the piece from the floor. At this point remove the protection and apply the other side while keeping the lower side from the floor.



At this point remove the protection and apply the other side while keeping the lower side from the floor.



Press well, heat the lower part and press it down to the floor.



The lower part will overlap the floor by about 1cm. this will allow to cut it properly to be aligned with the floor. This will allow to cut it properly to be aligned with the floor.



Press firmly