

ADHESIVES


MANDATORY

Modul'up junction tape

Ref. : 792

Must be used to install Modul'up flooring on an old subfloor (e.g. asbestos). Refer to the installation instruction for the application of the adhesive.

Box of one roll 50 m x 100 mm

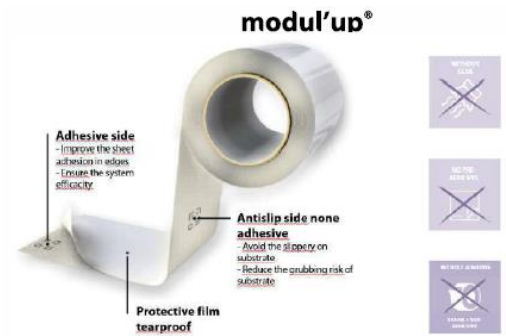

840 Eurotape Doubletack 50, 90 & 240



Ref. : 840

Dry adhesive strip specially designed for the skirting of Modul'up flooring (compact and traffic) in combination with the complete Modul'up skirting board. Also allows the implementation of semi-looselay systems and Sarlon Complete Step.



Roll of 50 m per box for the version in 50 mm and 90 m.

Roll of 25 m per box for the 240 mm version.

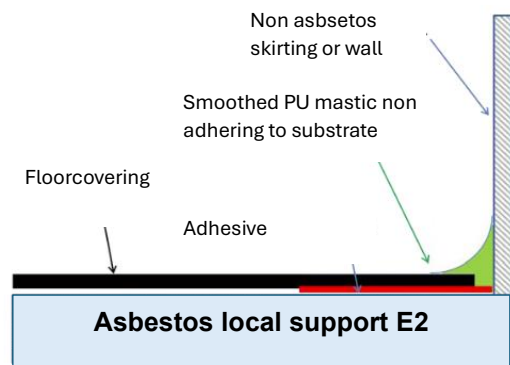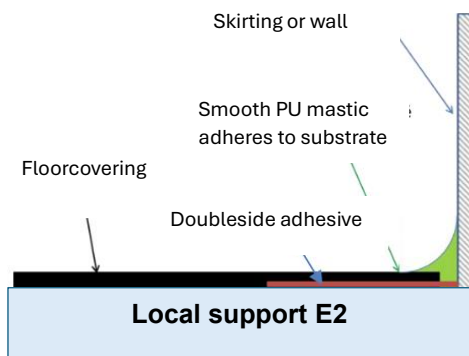

WELDING

MANDATORY

PVC WELDING ROD

Ref. : floorcovering ref

Welding allows the junction between strip edges.

Achieves E2/E3 rating with PVC.

A groove is formed, and the weld is then applied using a hot air gun fitted with a fast welding nozzle.



Coil of 50 m (Sarlon)

Estimative consumption of welding rods :

Sheet floorcovering without coving skirting : approx. 0,75 m/m²

Sheet floorcovering with coving skirting : approx. 1 m/m²



Welding rod box number

228 VINYLWELD Forbo
↔ 50 m Ø 4 mm # 7712105
433121 40392

Labelling found on each PVC welding rod

Commercial reference of PVC floorcovering corresponding with this welding rod

Coldwelding : Type A

Ref. : 869301

Type A welding treatment is recommended for waterproofing between two PVC floorcoverings with a transparent wear layer.

Consumption : 1 tube for 20 linear meters.



Box of 30 tubes of 44g


PROFILES

IMPORTANT

Cove former

Ref. : 3009 blanc / 3109 noir / 3209 noir

- 3009 = 15 x 15 : this profile is used vertically in internal corner to that the wall covering matches corners perfectly.
- 3109 = 20 x 20 : is installed at the foot of the partition. It allows the floorcovering to be installed as a skirting board and ensures the durability of corners.
- 3209 = 25 x 25 : same using as the 20x20 profile but appropriate for more rigid floorcoverings.

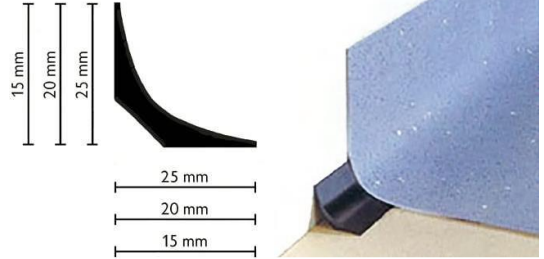


Box of 20 lengths of 2,5 m namely 50 m/box


Stair nosing to install before and after floorcovering

Phosphorescent PVC step nose with structured support surface to be implemented before (****TF) or after (****TJ) the flooring is laid.


Box of 10 lengths of 2,5 m namely 25 m/box

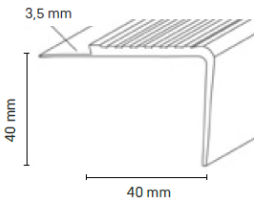

****TF (before)

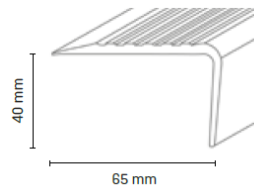

****TJ (after)

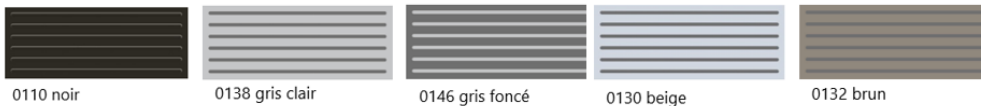

SKIRTINGS

SUGGESTED

Ventilated skirting


PVC skirting.

It can be used with a system combining Sarlibase TE and a compatible floor covering, as well as with the Modul'up TE system. Installation takes place after the floorcovering has been installed.


The base* of the ventilated skirting can be glued or screwed to the wall before the ventilated skirting is installed.

To ensure perfect adhesion, we recommend using a rubber tile hammer to avoid breaking the skirting.

It is also possible to assemble the base and body of the skirting together to install it as a single piece on the wall, using mounting adhesive type 232 eurosol montage.

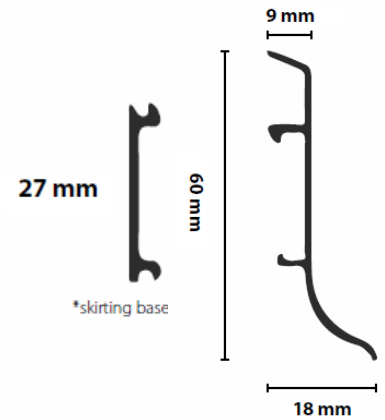

Box of 20 lengths of 2 m namely 40 m/box

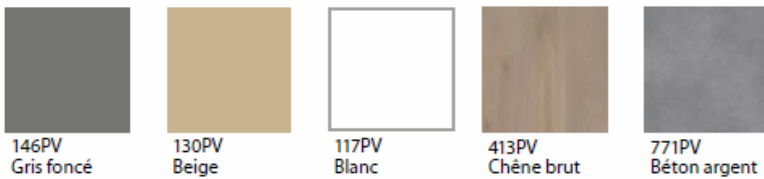

Modul'up complete skirting

Rigid skirting board specially designed for looselay installation of Sarlon Traffic Modul'up and Compact Modul'up, thanks to its 80 mm extended flat.

Essential when E3 classification is required.

Box of 10 lengths of 2,5 m namely 25 m/box

