

# HETEROGENEOUS ACCESSORIES

## MODUL'UP AND LOOSE LAY

### Adhesives

► MANDATORY



#### Junction tape for loose lay installation

Must be used to install Modul'up flooring on an old subfloor (e.g. asbestos). Refer to the installation instruction for the application of the adhesive.

**Box of one roll of 50 m x 100 mm**

Ref.: 792

\* In compliance with current regulations



#### 840 Eurotape Doubletack 50, 90 & 240

Dry adhesive strip specially designed for the skirting of Modul'up flooring (compact and traffic) in combination with the complete Modul'up skirting board. Also allows the implementation of semi-looselay systems and Sarlon Marche Complete.

**Roll of 50 m per box for the version in 50 mm et 90 m.**

**Roll of 25 m per box for the 240 mm version.**

Ref.: 840

### Welding

► MANDATORY

#### PVC welding rod

Welding allows the junction between strip edges. Achieves E2/E3 rating with PVC. A groove is formed, and the weld is then applied using a hot air gun fitted with a fast welding nozzle.

**Coil of 50 m (Sarlon)**



#### Estimative consumption of welding rods:

Sheet floorcovering without coving skirting : approx. 0,75 m/m2  
Sheet floorcovering with coving skirting : approx. 1 m/m2



#### Coldwelding: type A

Type A welding treatment is recommended for waterproofing between two PVC floorcoverings with a transparent wear layer.

Consumption: 1 tube for 20 m linear meters.

**Box of 30 tubes of 44 g**

Ref.: 869301



## Profiles


►IMPORTANT

### Cove former

- 3009 = 15 x 15 : this profile is used vertically in internal corner to that the wall covering matches corners perfectly.
- 3109 = 20 x 20 : is installed at the foot of the partition. It allows the floorcovering to be installed as a skirting board and ensures the durability of corners.
- 3209 = 25 x 25 : same use as the 20 x 20 profile but suitable for more rigid floorcoverings

**Box of 20 lengths of 2,5 m namely 50 m/box**


Ref. : 3009 blanc / 3109 noir / 3209 noir

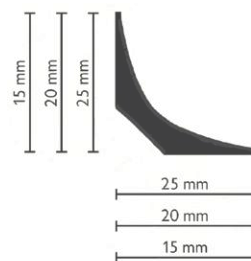


### Stairnosing before & after floorcovering

Phosphorescent PVC stairnosing with textured tread to be installed before (xxxxTF) or after (xxxxTJ) the floorcovering is laid.

**Box of 10 lengths of 2,5 m namely 25 m/box**

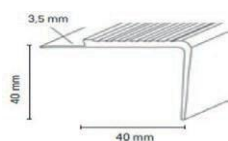

Ref : xxxxTF (before)

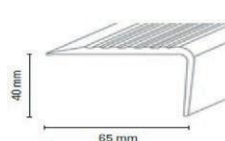

Ref : xxxxTJ (after)



0110 - noir



0138 - gris clair



0146 - gris foncé



0130 - beige



0132 - brun

## Skirtings

►RECOMMENDED

### Ventilated skirting

PVC skirting. It can be used with a system combining Sarlibase TE and a compatible floorcovering, as well as with the Modul'up TE system. Installation takes place after the floorcovering has been installed. The base\* of the ventilated skirting can be glued or screwed to the wall before the ventilated skirting is installed. To ensure perfect adhesion, we recommend using a rubber tile hammer to avoid breaking the skirting. It is also possible to assemble the base and body of the skirting together to install it as a single piece on the wall, using mounting adhesive type 882 Eurobond hightack.


**Box of 20 lengths of 2 m namely 40 m/box**



146PV  
Gris foncé


130PV  
Beige

117PV  
Blanc



413PV  
Chêne brut

771PV  
Béton argent

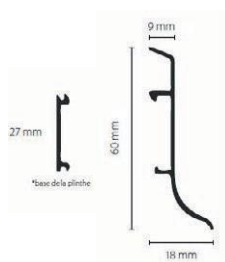

### Modul'up complete skirting

Rigid skirting board specially designed for looselay installation of Sarlon Traffic Modul'up and Modul'up Compact, thanks to its 80 mm extended flat.

Essential when E3 classification is required.

**Box of 10 lengths of 2,5 m namely 25 m/box**



1940PCA  
Blanc

3010PCA  
Beige



6500PCA  
Gris foncé

