

Caring for Forbo Marmoleum Wall Products with Topshield pro

Care Recommendations For

- Marmoleum Wall Panels
- Marmoleum Sheet Marbled (Real, Fresco, Vivace, Splash, Terra), Linear (Striato), Solid (Cocoa, Concrete, Piano, Walton), Real, Decibel, and Marmoleum Composition Sheet (MCS) installed directly on walls (Marmoleum wainscot)

Always refer to and follow the recommendations in **Forbo's General Floor Care Guidelines** prior to starting any cleaning processes. If any special or unusual circumstances arise, contact Forbo's Product Support & Education Services before proceeding with cleaning.

Spot Cleaning Procedure

Newly installed material must be protected from construction soil and damage. Initial cleaning procedures should be performed on all new installations exposed to normal construction soil and traffic. It is recommended to wait a minimum of five days before conducting any wet cleaning procedures in order to allow the adhesive to dry and cure properly. This timeframe can vary, depending on the substrate, site conditions and/or the adhesive used. Contact Forbo's Product Support & Education Services for additional information.

1. Spots and spills should be removed as quickly as possible.
2. Excess soiling materials such as chewing gum, nail polish, lipstick, asphalt, crayon, ink, marker, paint, lacquer, enamel, tar or foodstuffs should be removed by carefully scraping off with the flat side of a plastic spatula or blunt edge scraper.




3. Mix a cleaning solution by diluting a neutral pH cleaner in strict accordance with the manufacturer's recommendations. The pH of the cleaning solution must be between 6.0 – 8.0 pH.




4. Apply the cleaning solution to the Forbo Marmoleum using a microfiber cloth or sponge.



5. For difficult, solvent-based Spots (ink, enamel, etc), apply Forbo Adhesive Remover using a clean microfiber cloth or sponge.

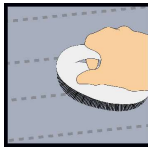

6. Wipe the area with a clean microfiber cloth or sponge to loosen and remove any soil. For heavier soil-loads, gently hand scrub the surface using a soft-bristle nylon brush. Do NOT use coarse, abrasive scrubbing pads.

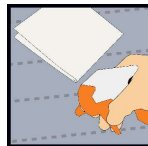

7. Using a clean microfiber cloth or sponge, wipe the area thoroughly with clean, cool water.

8. Allow the material to dry completely before use.

Caring for Forbo Marmoleum Wall Products with Topshield pro

Routine Cleaning


1. Remove all surface soil, debris, sand and grit.
2. Follow the Spot Cleaning Procedures as required to remove any marks from the Forbo Marmoleum.




3. Mix a cleaning solution by diluting a neutral pH cleaner in strict accordance with the manufacturer's recommendations. The pH of the cleaning solution must be between 6.0 – 8.0 pH.). Do NOT use any harsh acidic or alkali cleaners.



4. Apply the solution using a microfiber cloth or sponge. Application can also be done using a spray bottle. Apply enough cleaner to the surface so it remains wet, but do NOT flood the surface.

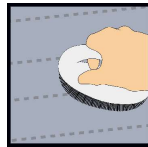

5. Wipe the area with a clean microfiber cloth or sponge to loosen and remove any soil. For heavier soil-loads, gently hand scrub the surface using a soft-bristle nylon brush. Do NOT use coarse, abrasive scrubbing pads.

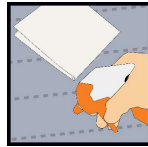

6. Using a clean microfiber cloth or sponge, wipe the area thoroughly with clean, cool water.

7. Repeat the process if necessary.

8. Allow the material to dry completely before use.

For additional information, visit www.forboflooringNA.com or contact Forbo's Product Support & Education Services at 1-800-842-7839.