

Installation Guidance Note: General guidance – Sphera

General Advice

The appearance, performance and durability of the installed floorcovering will be determined to a large extent by the quality of the prepared subfloor and the conditions in which they are laid.

Subfloor preparation should be carried out in accordance with BS8203:2017 Code of practice for the installation of resilient floor coverings. Areas to receive flooring should be clean, free from other trades, fully enclosed and weather tight. Subfloors should be clean and free of contaminants, smooth, sound, even and permanently dry.

Always conduct moisture tests on **all** substrates. All ground based level floors should have an effective moisture barrier.

Areas to receive flooring shall be adequately lit to allow for proper inspection of the substrate, installation and for final inspection.

It is essential that the laying area is at a steady temperature of 18 to 27°C for 48 hours prior to, during, and for 24 hours after installation. The material and adhesive should be conditioned in the same environment for at least 24 hours prior to the installation. Where the floorcoverings have been stored or transported immediately prior to delivery in temperatures below 10°C the acclimatisation period should be extended to 48 hours.

Prior to installation rolls should be checked to ensure that the correct colour, batch number and quantity have been received and that the material is in good condition. No claim will be accepted for incorrect colour, pattern or obvious damage if the material has been fitted.

Use material from the same batch/dye lot and install in roll number sequence. The use of different production batches will always result in visible shade differences. The batch number is clearly marked on the material packaging and must be checked before commencement of installation.

Install one length of sheet at a time, making sure to place the material into wet adhesive and roll afterwards with a 68 kg roller, rolling in all directions to ensure a firm bond. It is important to only spread sufficient adhesive that can be covered within the open time of the adhesive.

Note: the adhesive must be spread evenly over the entire floor area with particular attention to edges – this will ensure that the sheet is fully bonded at the perimeters.

Areas that cannot be rolled with the large roller e.g. abutments such as door frames or skirting boards should be rolled with a hand roller or pressed into the adhesive with a rubbing hammer.

Always clean away excess adhesive with a damp cloth before it is allowed to dry.

As with all newly installed floor coverings Sphera should be protected from heavy traffic for 48 hours or, if the floor is to be subjected to high point load or wheeled traffic, for five days. The floor must not be washed for 48 hours after installation.

Installation Guidance Note: General guidance – Sphera

Forbo Sphera can be used in conjunction with under-floor heating systems. A separate guidance note **“Installation of Forbo Floor Coverings on Underfloor Heating Systems”** provides more information on the conditions for installation in such circumstances.

Adhesive recommendations and application

For standard installations Eurocol 540 Eurosafe Special adhesive is recommended, however, if a low emission EC1 adhesive is required, Eurocol ‘640 Eurostar Special’ may be used. Use a 1.5 x 5mm V notched trowel to apply the adhesive.

Note: Trowels will wear during use, check the trowel both before and during use to ensure that the proper, specified trowel notch is used and maintained.

The open time of the adhesive will depend on site conditions and porosity of the base. It is best practice to conduct an adhesive bond test before starting the installation. Bond testing will assist in identifying both the working characteristics of the adhesive (waiting and working time) for the site conditions, and also any potential bonding problems.

If alternative adhesives are to be used consult with the supplier for usage information, guidance and warranty.

Sphera should be rolled with a 68 kg roller immediately after laying into, and within the open time, of the adhesive – the open time of the adhesive will depend on site conditions and porosity of the base.

Always clean away excess adhesive with a damp cloth before it is allowed to dry.

Direction of laying

The following installation advice should be followed in relation to direction of sheet laying.

Sphera Element range

The product has a unique uni-directional design which allows for fitting sheets in the same direction or alternate directions (i.e. cross joins on corridor T-junctions) without losing the overall design aesthetic. In main field areas it is recommended to fit the sheets in the same overall direction.

Sphera Energetic and Evolution ranges

Sheet lengths must be always be installed in the same direction.

Coved Skirtings

Sphera can be used in conjunction with standard PVC set in coved skirtings or site formed using standard techniques with a 20mm or 38mm cove former.

Installation

Always check the recommend direction of laying before cutting sheet length (see “Direction of laying above”).

Cut the sheet material to the required lengths and then back roll each cut length before cutting to fit in order to release any roll tension from the winding of the sheet (see below).

Installation Guidance Note: General guidance – Sphera

Back rolling

Both linoleum and sheet vinyl products are tightly rolled in the factory. The tension caused by this process will mean that the goods will shrink a little in the length when unrolled. It is recommended to reduce the effect of shrinkage by re-rolling the cut lengths of sheet back on themselves and allowing to stand in this state for 15 minutes prior to unrolling again and commencing fitting.

It is recommended that the roll lengths are rolled out and laid out flat in the installation area to acclimatise for 24 hours at a minimum temperature of 18° C prior to commencing fitting the sheet.

Cutting and fitting

Each sheet should be scribed to fit and the factory edge removed before cutting the seam. Seams should overlapped and under-scribed or cut with a seam cutter to form a close butt joint. See below.

Scribe the long side of the sheet to the wall first. Place the sheet back against the wall with the ends lapping up the walls. With the sheet placed correctly in position along the length, trim the factory edge on the opposite side of the sheet using a seam cutter or by striking a chalk line and cutting through the sheet following this line with a straight edge and utility knife (see below).



Trace the line of the trimmed edge onto the subfloor with a pencil. This line acts as a guide line.

Place a ruler or straight edge, at right angles to the sheet. Across the edge of the sheet draw a cross check on both material and subfloor (Fig. 1). Fold one end of the sheet back on itself, pull the other end clear by about 25mm from the wall. Position the sheet to lie flat on the floor, with the sheet edge true to the guide line. Set the bar scriber at the distance that the cross check has opened up (Figs. 2 and 3).

Keep the scriber parallel to the guide line (B) and scribe the end of the sheet. Cut the material along the scribe line. Check fit to the wall, with the aid of the cross checks and the guide line.

Installation Guidance Note: General guidance – Sphera



Fig. 1



Fig. 2



Fig. 3



Fig. 4

Scribe and cut the other end of the sheet using the same method.

FITTING LONG LENGTHS

During the manufacture of sheet linoleum or sheet vinyls the material is stretched slightly in the length. Often the first opportunity it has to relax fully is when it is unrolled, scribed and folded back for the spreading of the adhesive. If the length being fitted is a long one, this relaxation can be significant enough for slight shrinkage to occur even when back rolled leaving the fitted end a little short of the wall once folded down again into the adhesive.


To avoid this, scribe and fit one end of the sheet and then stick all but the last 1.5m to 2.00m at the other end before scribing and fitting this end. Any relaxation during the folding back of such a short length will not be significant. The whole length must be stuck and rolled while the adhesive is still active.

Installation Guidance Note: General guidance – Sphera

Lay the next sheet alongside the first fitted sheet with the sheet ends lapping up the wall and the side edge of the sheet overlapping the previously fitted sheet by approximately 2cm. Trim the factory edge of the opposite side of this sheet as above and trace the line of the trimmed edge onto the subfloor with a pencil.

Scribe and cut each end of this length as for the first sheet.

Cut the seam using a seam cutter or under scriber to form a close butted seam (see below).



Repeat this process for each subsequent sheet length. The final length which abuts the opposite wall should be cut and fitted using the method described for the first length.

Note: Factory edges should not be butted together for seaming.

Seams should be cut to form close butted joints before placing the vinyl sheet into the adhesive.

Adhering the sheet

Following these recommendations will give the installer the best opportunity to manage the open and working time of the adhesive and ensure the correct bond of the floor covering.

Note:

- **Before using the adhesive, check the adhesive manufacturer's instructions and recommendations.**
- **Never spread more adhesive that can be laid and rolled within the adhesive open time**


Pull back the sheet length to approximately half way.

Spread the adhesive using the appropriate notched trowel ensuring that the correct trowel notch is maintained throughout the installation. If the trowel notch wears during the installation replace the trowel blade with a

Installation Guidance Note: General guidance – Sphera

new one. The adhesive should be spread evenly and right up to perimeter walls and other abutments such as architraves – see adhesive guidance above.

Lay the sheet into the adhesive after the appropriate waiting time and rub the sheet with a rubbing board or glider from the centre outwards to remove any trapped air between the sheet and the adhesive. Ensure that the sheet does not move during this process and that close butt seams are maintained. Check that the sheet has been placed correctly at the seams and remove any excess adhesive before rolling.

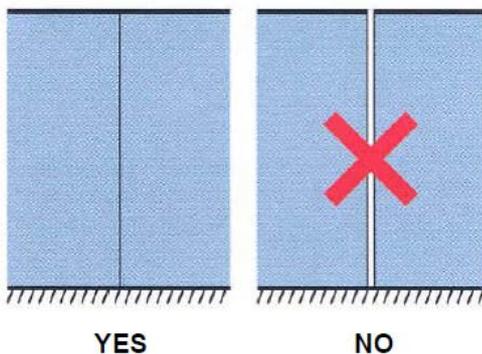


Roll the sheet with a 68kg roller, first across the width of the sheet and then along the length to ensure that complete adhesive transfer is achieved. Pay particular attention to the perimeters. A seam roller or rubbing hammer can be used to ensure the sheet is pressed into the adhesive around harder to reach areas such as door frames and overhangs from furniture or fittings.

Seam grooving and welding

Note: Leave at least 24 hours after the floorcovering has been stuck down before starting to weld to allow the adhesive to cure.

Seams should be grooved to a depth (d) of approximately 2/3rds of the material thickness (e). A 'P' Type groover is recommended for manual grooving of seams, however, automatic or power groovers may be more productive on larger installations.

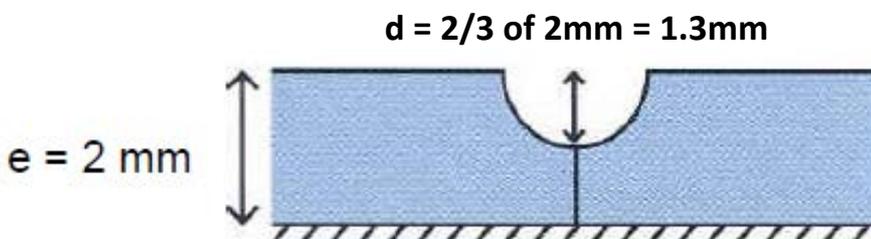

Switch on the hot air gun and allow 5 to 7 minutes for it to reach the selected temperature. Fit the welding nozzle before switching on the hot air gun.

If the gun is resting on the floor ensure that the nozzle is not directed at the floor or anywhere dangerous.

Installation Guidance Note: General guidance – Sphera

A good weld is obtained by the correct combination of temperature, speed and downward pressure. Weld guns will vary, so it is always advisable to practice weld techniques first on a piece of waste material in order to match the correct air gun temperature with welding speed.

Make sure the groove is thoroughly clean before beginning to heat weld. Make sure that all electrical cables are laid out without tangles and that there are no obstructions along the seam to be welded.

Cut the welding cable to a consistent and generous length or unwind sufficient weld rod from the reel and put the reel in a position where you are working towards it. Have the power cable ahead of you if possible.

Start at a wall and work towards the centre of the room. Thread the cable through and weld moving backwards, away from the wall, maintaining a slight downward pressure so that the weld nozzle will force the weld cable into the groove.

Trimming

While the cable is still warm trim off most of the top half of the cable down to approximately 0.5mm using a sharp spatula and slide or Mozart knife (with the spacer blade in place) which fits over the cable. This enables the cable to cool more quickly and enables a quick first cut to be made without risk of gouging the material.

The welding cable will dish slightly (concave downwards) as it cools. Wait until the material is completely cool before trimming flush with the surface of the sheet using a sharp spatula angled slightly across the line of cut or Mozart knife (with the spacer blade moved to the side).



Spatula





Slide



Mozart knife

Note: Making the final trim while the welding rod and material is still warm can result in dishing of the weld cable as it cools. This may result in subsequent seam soiling problems or permanent damage to the surface of the flooring.

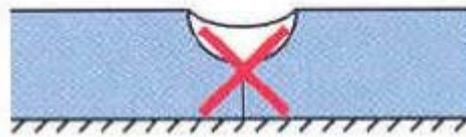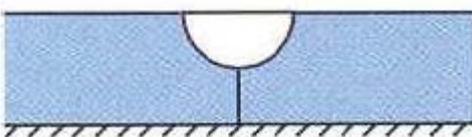

Perimeter sealing

If the purpose of specifying welded seams is to prevent the risk of moisture getting under the floorcovering then logically the specification must ensure that perimeters are also sealed, together with any areas where pipes, etc. come up through the floorcovering. This is usually done with a silicone sealer but in special areas, such as prisons, a hard-setting epoxy may be used.

Installation Guidance Note: General guidance – Sphera

On completion of the installation

First impressions may have more impact on the client than hours of skilled fitting.

The completed installation should be cleared of scrap material and debris, the floor swept or vacuumed and any traces of adhesive residues removed from the floor and skirtings.

If the floor covering is to be protected from other trades or site traffic prior to project completion, a protection product should be chosen that is appropriate for the type and level of traffic likely to be experienced and the potential for impact, scratching or indentation damage.

In many cases it is customary for the initial floor preparation to be left, or subcontracted, to a professional cleaning and maintenance contractor who will have the staff and equipment to do the job thoroughly.

If the optimum performance of any new floor covering is to be achieved, it is important that the correct cleaning and maintenance procedures are used from day one. Cleaning and maintenance guides for all Forbo Flooring linoleum products are available for download at: www.forbo-flooring.co.uk/vinyldownloads.

Cleaning and maintenance guides should be passed onto the main contractor, client or end user as appropriate on completion of the installation, and before any hand over clean is started.

Additional Reference documents/Information

Forbo Floor coverings Installation Guide. (Tel: 0800 731 2369)

BS8203:2001+A1:2009

The CFA Guide to Contract Flooring (Tel: 01159 411126)